


W42501

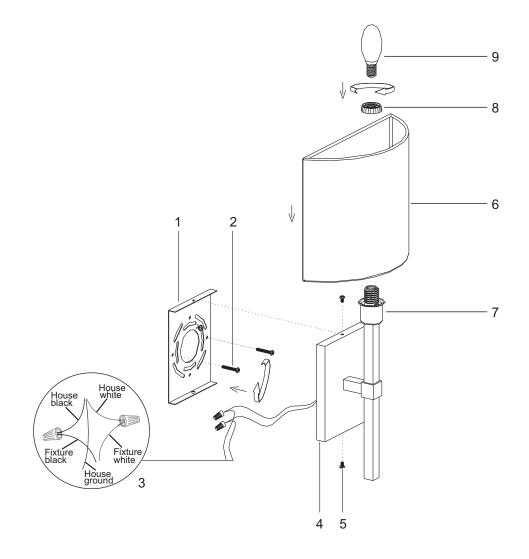

INSTALLATION INSTRUCTIONS:

- Ensure main supply is switched off.
- Fit mounting bracket (1) onto mounting surface with self-tapping screws (2).
- Connect wires (3) according to color (White to White, Black to Black). Connect all earth lug together onto the crossbar with green screw to tight.
- Fit wall plate (4) onto mounting bracket with plate screws (5).
- Fit shade (6) onto lampholder (7) with shade ring (8).
- Install lamp (9) firmly into lampholder.
- Reconnect power.

WARNING:

- This fitting must be earthed.
- Disconnect power and allow fitting to cool down before cleaning or changing the lamp.

www.matteolighting.com

MATTEO LIGHTING 103-19099 25th Ave. Surrey BC Canada V3S 3V2